
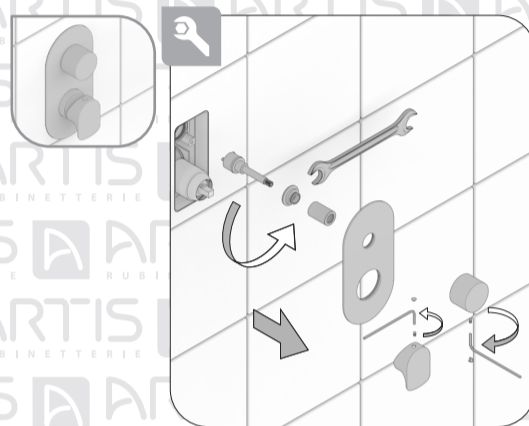
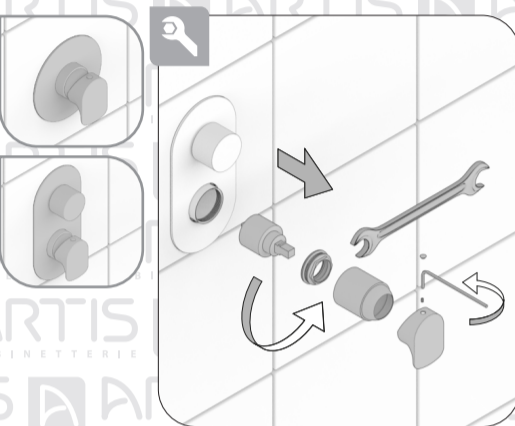
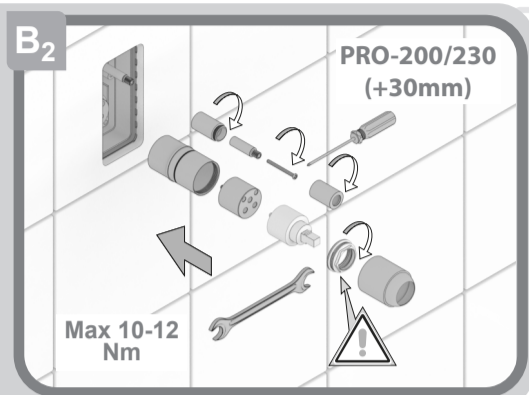
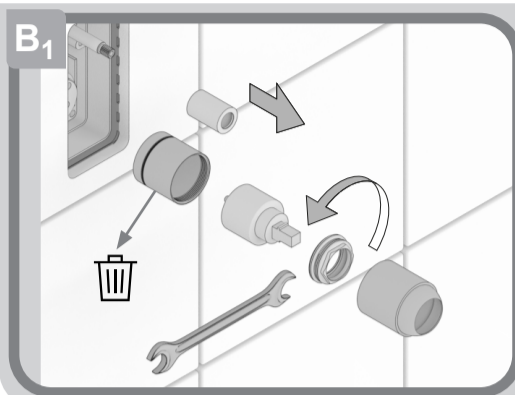
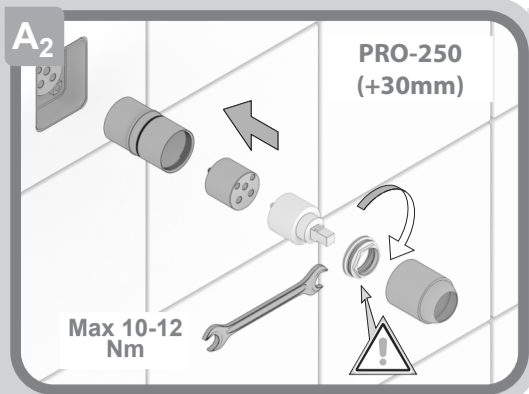



ISTRUZIONI DI MONTAGGIO INCASSI DOCCIA

INSTALLATION INSTRUCTIONS CONCEALED SHOWER VALVES


INSTRUCTIONS DE MONTAGE MITIGEUR DOUCHE À ENCASTRER

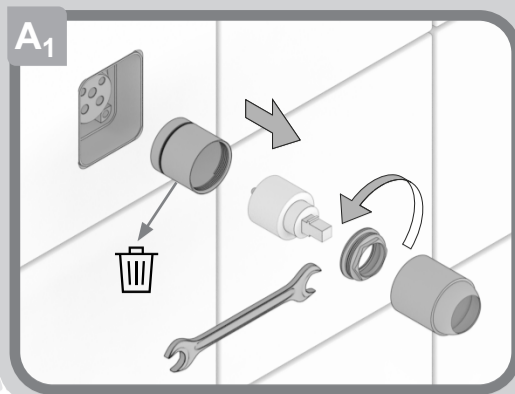


1 VIA/1 WAY/1 VOIE

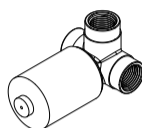


2 VIE/2 WAYS/2 VOIES



3 VIE/3 WAYS/3 VOIES





VALIDO PER TUTTO IL PROGRAMMA ARTIS
VALID FOR THE WHOLE ARTIS PROGRAM
VALABLE POUR TOUT LE PROGRAM ARTIS
















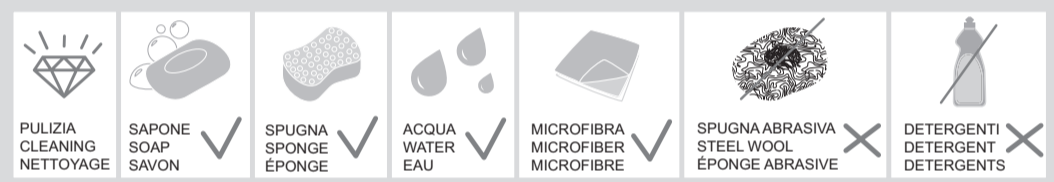


MIRKO ROGORA Design Workshop | www.mirkorogora.it | Rev. 2024.02.A

A54054N

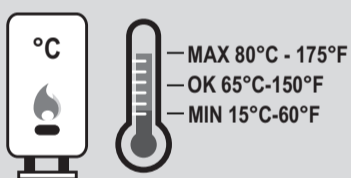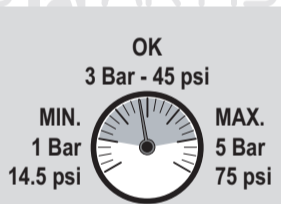














Eseguire il lavaggio della tubazione come suggerisce la normativa DIN 1988 / EN 1717.
To complete the installation flush out both hot and cold water supply.
Rincer l'installation complete conformément à la réglementation et aux normes.

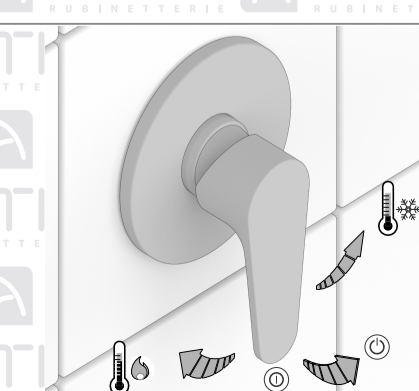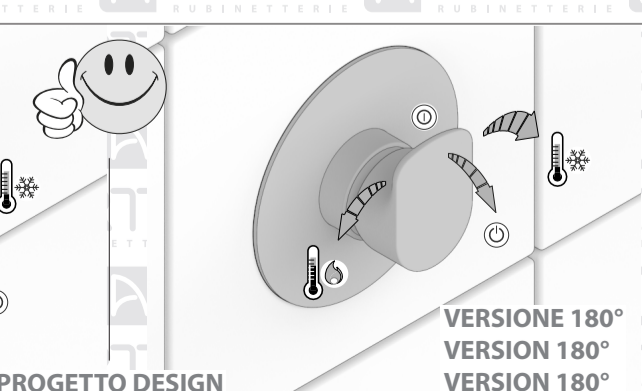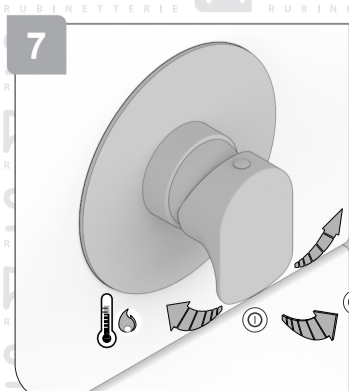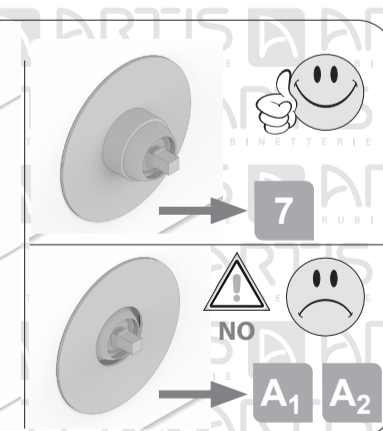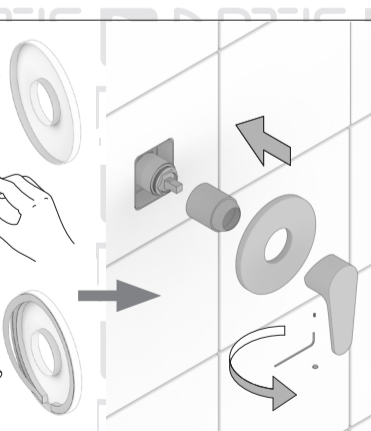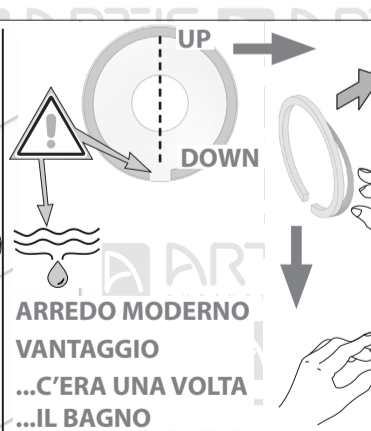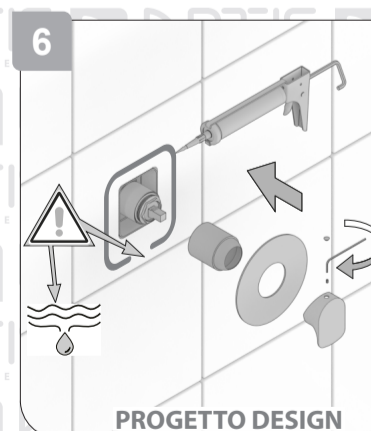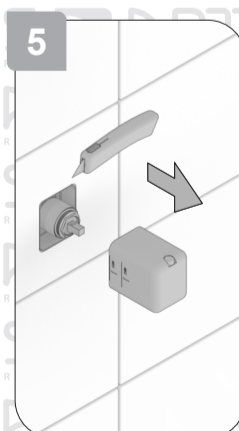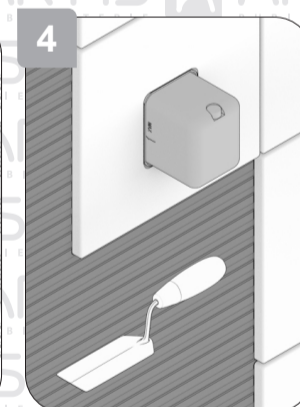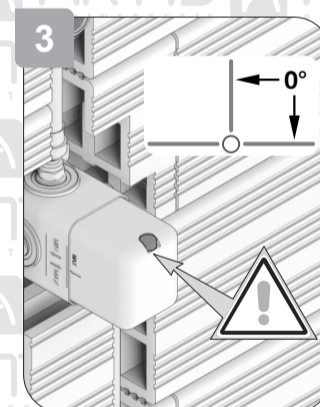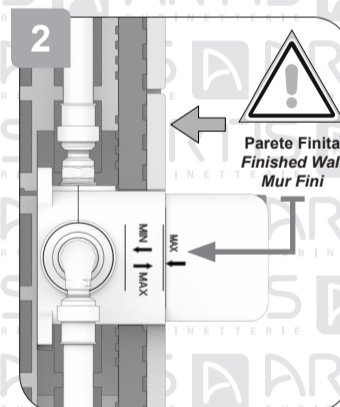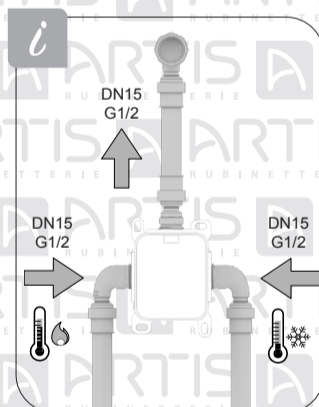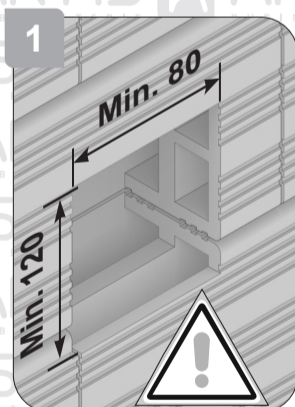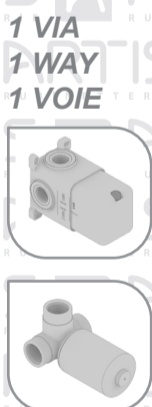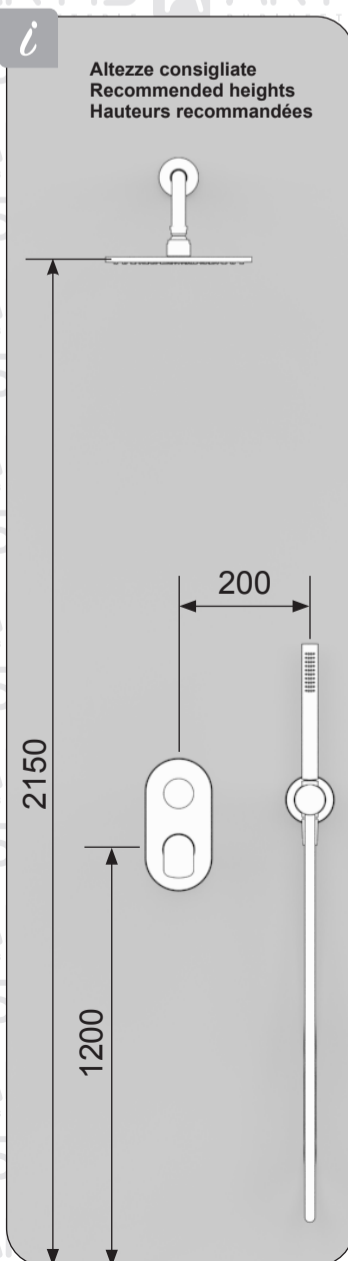

VERSIONE 180°
VERSION 180°
VERSION 180°

ARREDO MODERNO
VANTAGGIO
...C'ERA UNA VOLTA
...IL BAGNO

2 VIE
2 WAYS
2 VOIES

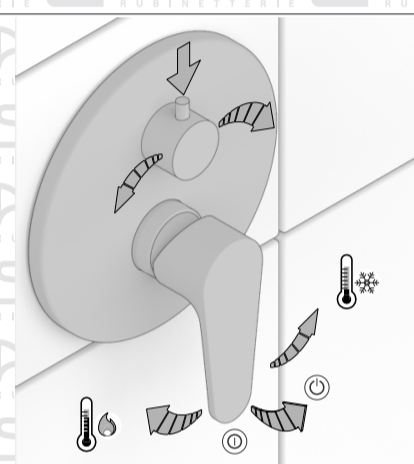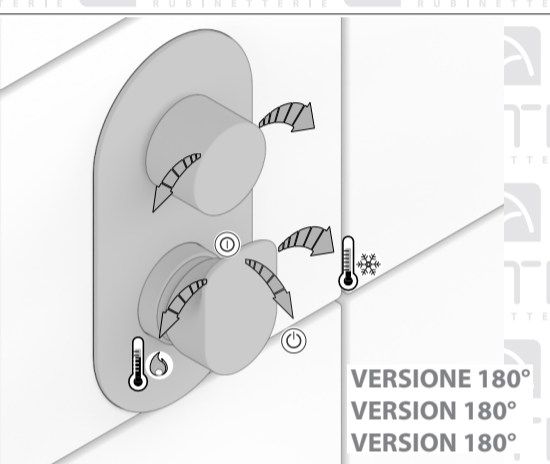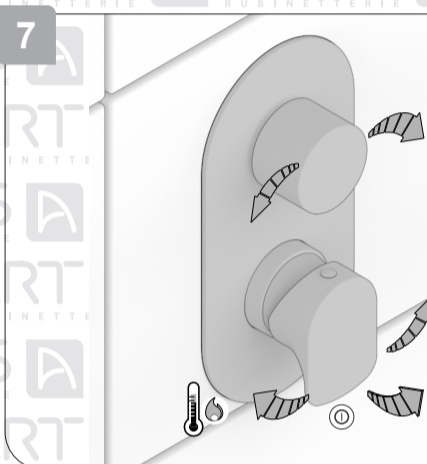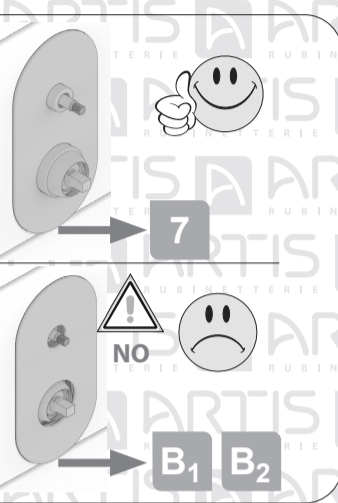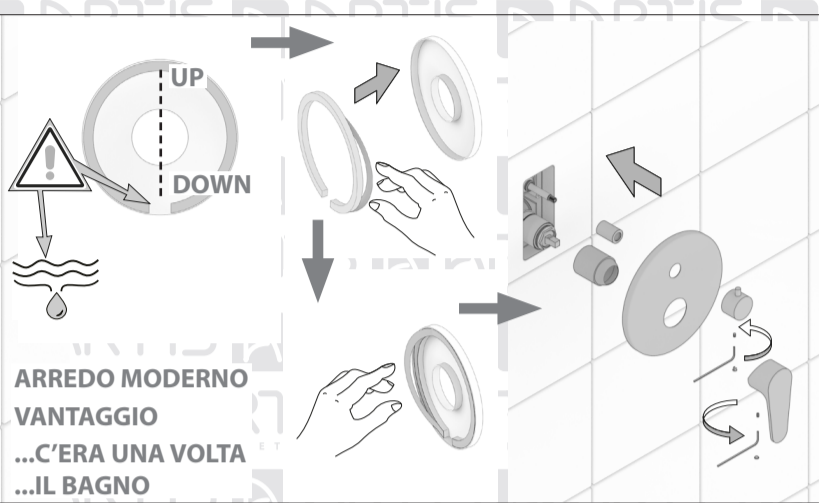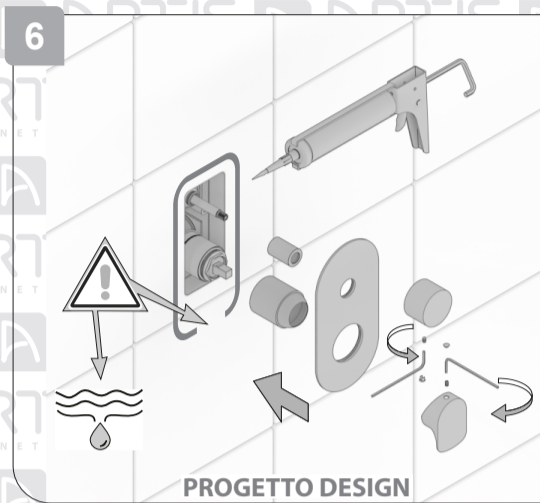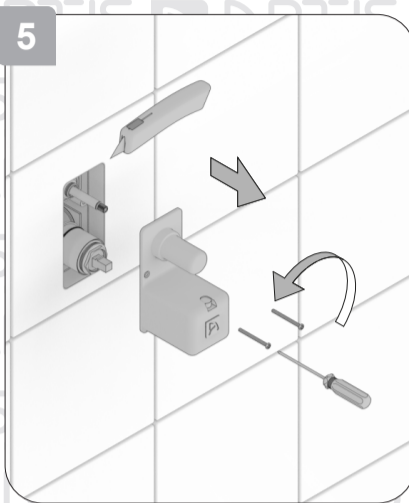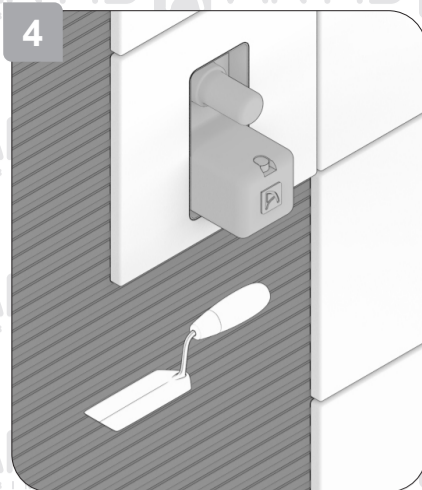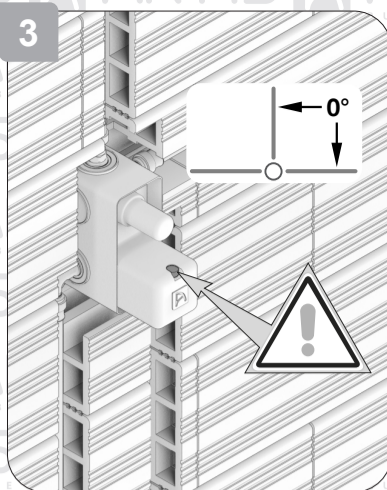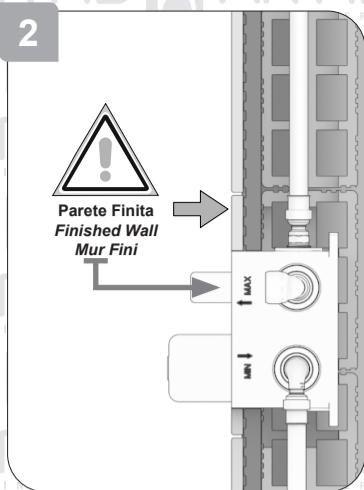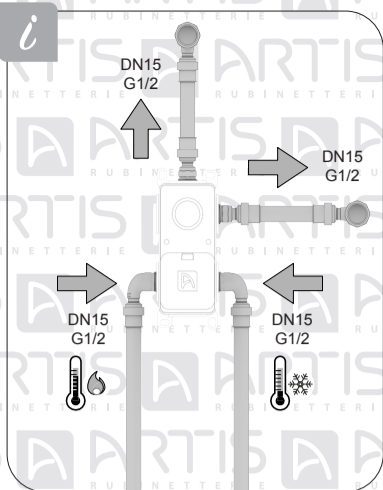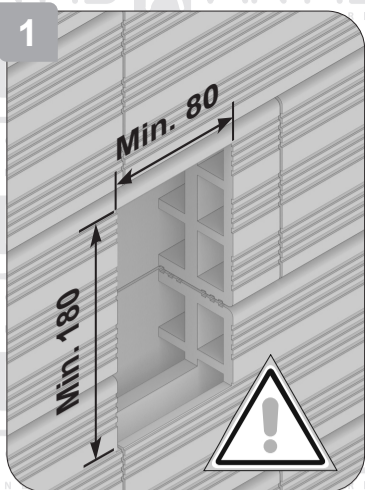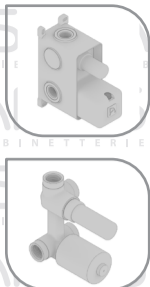

3 VIE
3 WAYS
3 VOIES

